

BEAGLE PUP SPARES

Mar-06

Batch 1CA

Qty	Description	Part No	Notes
2	Baffle assy	BE 51-20017	
3	Carb ht shield	BE 51-20063	
1	Firewall angle	BE 10-10605	
1	Shroud (pair)	BE 51-20049-1	
1	Non-return valve	BE 57-30005	
1	Flap lever brkt	BE 45-10181-9	
1	Flap lever brkt	BE 45-10181-15	
1	Fuel contents guage	BE 80-10061	
1	Stb DV window	BE 10-11408	
12	Washer	BE 40-60007	
1	Charging valve	MS 28889-1	
1	Spring	LE 005F-5	
2	Spacer	AS 2806-6-033	
1	Vac regulator	133 A3	
2	Pins	AIR 11304	
9	Nose leg bearing shell (narrow)	AIR 113632	
9	Nose leg bearing shell (wide)	AIR 116292	
2	Bolt	AIR 113878	
1	Windshield		
1	Side window (port)		
5	Various fuel tanks		
1	Tailplane		
3	Aileron		
4	Flap		
3	LH elevator		
4	RH elevator		
2	Rudder		
2	Top cowling		
2	Bottom cowling		
	Various cowling parts		
3	Cabin door		
3	RH wing tip		
3	LH wing tip		

Qty	Description	Part No	Notes
6	Tailplane strakes		
3	LH main leg fairing	BE 10-10153-13	
2	RH main leg fairing	BE 10-10153-14	
1	LH fairing	BE 10-10987-1B	
1	RH fairing	BE 10-10987-2B	
3	Fairing	BE 10-10987-11	
3	Fairing	BE 10-10987-12	
1	Coaming		
5	Seat backs	BE 16-10001	
1	Seat backs	BE 16-20011	
7	Rear seat pan		
1	Rear bench seat back		
	Various int linings & mldgs & trims		
1	Panel	DOF BE 2001	
1	Panel opp hand		
1	Insp panel	BE 20-20043	
1	Trim panel	BE 18-10005-4	
2	Panel	BE 18-10263	
1	Panel	BE 18-10264	
1	Panel	BE 10-20018	
2	Panel	BE 10-10007-15	
1	Panel	BE 10-10007-10	
2	Panel	BE 10-10007-9	
5	Air intake panel	BE 10-10997-331-10G	
1	Air intake panel opp hand		
11	Various tab trim panels		
2	Alum mldg	BE 18-10271-112	
2	Alum mldg	BE 18-10271-111	
1	Insp panel	BE 10-10007-10	
1	Insp panel	BE 10-10205-7	
1	Insp panel	BE 10-10007-153 SA	
2	Panels	BE 18-10005-3	
2	Panels	BE 18-10005-4	
1	Trim mldg	BE 10-10271-107	
1	Trim mldg	BE 10-10271-108	
1	Trim mldg	BE 18-10271-115	
1	Trim mldg	BE 18-10271-116	
1	Cover panel	BE 10-11308	

Qty	Description	Part No	Notes
1	Cover panel	BE 10-11307	
4	Misc mldg strip		
	Cab trims - doors		
	Numerous insp panels		
	Various trims & mldings		
	Various floor panels		
2	Lining panel	BE 18-10005-14	
1	Lining panel	BE 18-10005-13	
3	Central roof lining panel	BE 18-10007-5A	
3	LH rear lining panel	BE 18-10219-2	
3	RH rear lining panel	BE 18-10219-1	
4	C/console	BE 18-10008-4 (or 9)	
5	Cab door lining panel		
1	Landing light cover (dmgd perspex)		
3	Spinner back plate		
2	Spinner front plate		
3	Rear bulkhead	BE 18-10257-SA	
7	Fuel sender	BE 80-10045	
1	LH step		
1	RH step		
	Wheel hubs & centres		
9	Wheel ring	AHO 85409	
4	Wheel bearing		
2	Mag switch relay		
1	Strut P55552-4	95260-1	
1	Control lever	BE 45-10171	
1	Shield	BE 10-20055-4	
1	Shield	BE 10-11223	
1	AC fuel pump		
4	Fuel flow valve		
1	Static tube	BE 04-10025-7	
1	Fwd valve (528K169)	BE 5-30005	
1	Fuel line	BE 57-10099-1	
2	Stall warner horn		
3	Fresh air vent		
1	Flap motor & linkage		
1	Oil filter temp bulb assy		
2	Anti-collision light (red)		

Qty	Description	Part No	Notes
	Misc lighting parts		
	Fuel selector switch parts		
3	Bkt with fuel select mech	BE 57-10031-5 + 10-10889	
1	Control column		
1	H/brake	BE 49-10003	
1	Starter relay & solenoid assy		
4	Solenoid		
1	(Prestolite) volt reg (for Series 2)	VSF 7203S	
1	(Prestolite) volt reg (for Series 1)	FOC 4002B	
2	Air arm	112976F	
3	Nylon door plate	93-6246	
3	Door lock mech	BE 10-10781	
4	Door lock mech	BE 10-10777-18 +19	
	Various door handles & pulls		
20	Various control cables		
1	Rod end bkt	BE 45-10047-3	
1	Starter relay spst type II		
3	Bell crank + contr rod + spring	BE 31-10091 + 45-10049	
5	Control rod		
1	Start ring gear		
1	Prop spacer		
1	Strut LH	16091	
2	Control cable outer	S1212-47	
1	Fire extinguisher bkt		
1	Assy	BE 45-10201	
3	Seal	AIR 12986	
12	Clip	9524463	
10	Bush	BE 10-10257	
26	Bolt	NAS 144 RM	
2	Brng shell	AIR 48912	
3	Bolt	A112-7N	
11	Bkt	BE 40-10025	
6	Bolt	NAS 144 RO	
9	Bolt	AIR 113048	
1	Bolt	BE 40-10021	
2	Bolt	A111-7G	

Qty	Description	Part No	Notes
4	Bolt	A111-11G	
1	Bolt	BE 40-10005	
5	Bolt	A111-12G	
9	Bolt	A102-15	
2	Seal ring	AIR 117558	
2	Bolt	BE 81-10059	
2	Bolt	A111-8G	
60	Nut	A126-EGG	
6	Bolt	A111-10G	
48	Nut	A110-NS	
1	Box	BE 18-10005-S	
1	Assy	BE 45-10321-332-45B	
1	Control rod	IND/BE-45-10043	
1	Control rod	IND/BE-45-10103	
1	Control rod	IND/BE-45-10043-9	
1	Control rod	IND/BE-45-10095-1	
3	Control rod	IND/BE-45-10183-7	
1	Lever	BE 10-10777-19	
12	Clamp blocks	BE 10-10413	
	Various pulleys		
2	Tube assy	BE 45-10057	
4	Steering assy	BE 45-10059 (or 61/62)	
6	Brake master cyl		
1	Arm	BE 45-10025	
1	Arm	BE 45-10023	
1	Switch	99377-66	
1	Air vent / demist contr	BE 10-11119	
1	Air vent / demist assy	BE 4-10051	
2	Assy	BE 45-10181	
4	Central contr cons	BE 47-10037	
	Various throttle / carb ht contr cables		
1	Control col gaiter (leather)		
4	Pedal bar assy	BE 45-10271-5A2	
	Assy	BE 45-10253-1	
4	Pedal assy		
3	Instr panel		

Qty	Description	Part No	Notes
	Various harness parts		
4	Cabin heater air valve	BE 74-10017-3	
1	Fuse panel		
1	LH throttle assy		
1	Bkt	BE 10-11177	
	Various exhaust mufflers & ht shields		
2	Exhaust clamps		
	Various exhaust parts		
1	Engine baffle panel	BE 51-30051	
1	Engine baffle panel	BE 51-20017	
17	Various engine baffle panels		
6	Main gear leg		
3	MLG shock abs	AIR 48688	
	Various MLG shock abs parts		
8	MLG supp bearing	BE 10-10192	
4	Backing plates & shims for supp brgs		
1	Nose leg		
4	Nose leg top bkt	AIR 113366	
3	Nose leg lower bkt	AIR 113368	
2	Pick up assy	BE 45-10223	
3	Nose leg oil head		
6	Spacer	AIR 114268	
6	Segment	AIR 114476	
1	Strut BE 80 20001-5	AIR 113610-1	
5	Wheel axles		
3	Dunlop brake caliper sets		
2	Dunlop wheels (inners rewelded)		
	Various pads for Lockheed calipers		

If you are interested in anything, please email Lawrie Grundy (l.grundy@idlewild.fsworld.co.uk) or call him on +44 (0)1277 200093 to discuss prices and delivery methods.